
# **DISCONNECTING SUMP PUMPS**

Sump pumps and sump pits can be used to manage stormwater that is entering your basement. Where you discharge this collected water is important. Do not connect to the wastewater system unless prior approved by Halifax Water. Removing the sump pump and allowing the sump pit to drain by gravity is preferred to avoid mechanical issues and power costs.

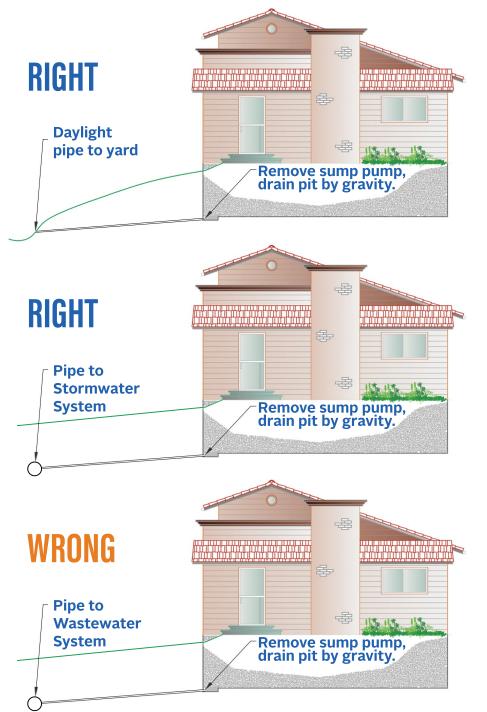

### **DO:**

Discharge to the ground, away from your foundation. Cap the old discharge pipe.

### **AVOID:**

Flooding your neighbour. Icing problems in the street/sidewalks.

### **NOTE:**

This is general information. Consider your specific property conditions. You may wish to consult with a professional.


For questions contact Halifax Water at 902.420.9287 or inflow@halifaxwater.ca





## **REDIRECTING SUMP PUMPS**

Sump pumps and sump pits can be used to manage stormwater that is entering your basement. Where you discharge this collected water is important. Do not connect to the wastewater system unless prior approved by Halifax Water. Removing the sump pump and allowing the sump pit to drain by gravity is preferred to avoid mechanical issues and power costs (see over).

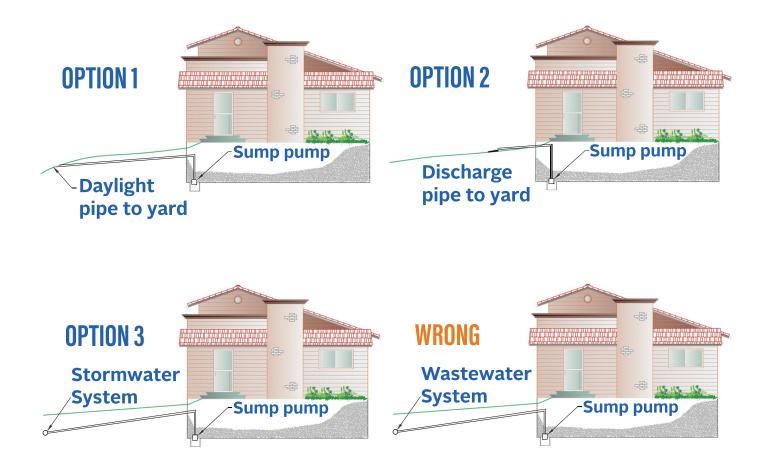

### **DO:**

Discharge to the ground, away from your foundation. Cap the old discharge pipe.

A back-up battery power supply is recommended to maintain protection during power outages.

### AVOID:

Flooding your neighbour. Icing problems in the street/sidewalks.

### NOTE:

This is general information. Consider your specific property conditions. You may wish to consult with a professional.

For questions contact Halifax Water at 902.420.9287 or inflow@halifaxwater.ca



